



Step 5: Install the End Stop

To install the end stop, slide the last carrier back out of the track. Insert the end stop and tighten it. Then slide the last carrier back into the track. Place the pole back into the end bracket.

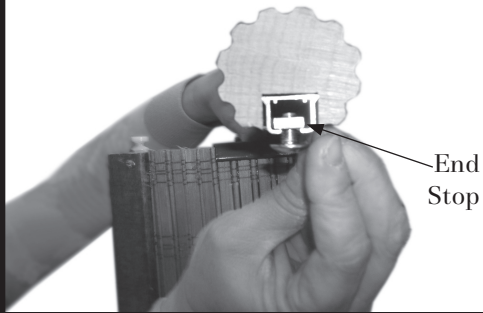


Step 6: Attach Support Brackets

Attach the pole to the support brackets.

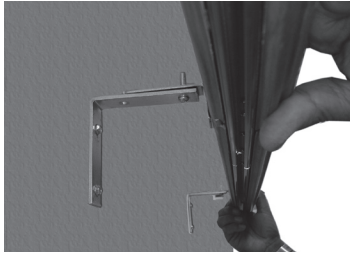

Step 7: Install the Finials

Install the finials into the pre-drilled holes at the ends of the pole.

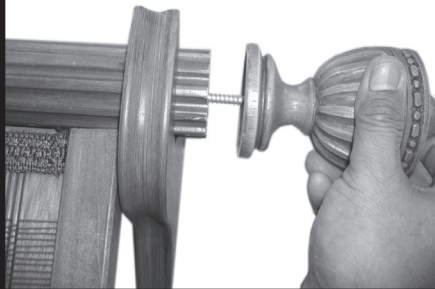

Care and Cleaning

It is recommended that Horizons™ Decorative Pole Averté be vacuumed periodically with a brush or drapery hose attachment.

Guarantee

Your Horizons™ Decorative Pole Averté is covered by a limited lifetime warranty. All colors tend to lose their original intensity over time, and pull cords eventually wear out. This is considered normal wear and tear, and is not covered by this Guarantee. Abuse, misuse and improper installation are not covered. Finally, color lots vary and may not exactly match the sample in your sample book or a previously ordered shade. Repair is the purchaser's sole remedy under this guarantee. B&W cannot be responsible for any installation costs nor costs of incidental or consequential damages.

B&W Window Fashions
1705 Waukegan Road • Waukegan, Illinois 60085

Installation Instructions for

Horizons™
by B&W

Decorative Pole Averté



Congratulations on
the purchase of your new
Horizons™ Decorative Pole Averté.

Horizons™
by B&W

Step 1: Bracket Location

Center the width of the Decorative Pole Averté over the window space. Place the inside edge of each bracket at the ordered width. The Rod will extend beyond the bracket at each end for finials to attach properly.




For a floor length Decorative Pole Averté, take the ordered length of the Averté, add 2" and mark this point. This will properly place the height of the top of the end brackets.

For non-floor length Decorative Pole Averté, center the length of the Decorative Pole Averté to the length of the window.


Step 2: End Bracket Mounting Screw Location

On the back of the end bracket, there is a slotted mounting plate. For proper screw placement, measure down from the mark you made in step 1 for the top of the bracket 2" for the first screw and 3" for the second screw. Care should be taken to ensure the end brackets are level.

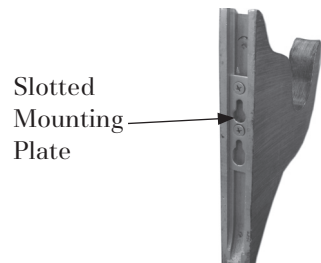

Step 3: Locating the Support Brackets

There are pre-spaced hex-head screws located on the back of the Decorative Pole. These are for support brackets.

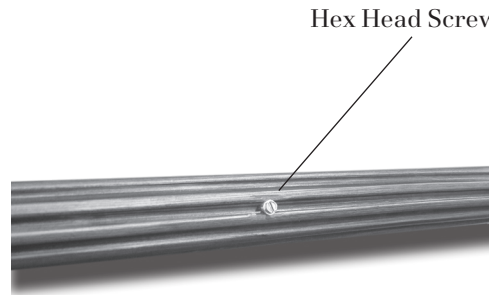

Place the pole centered on the end brackets and mark the screw spacing on the wall for each hex head screw on the back of the pole. Place the top of the support brackets 2" lower than the top of the end brackets.



Once all brackets are installed, mount the pole onto the end brackets only.

Step 4: Assembly

On the end that the shade is going to stack, lift the pole off of that end bracket. Do not lift the pole off of both end brackets.



Slide the round carrier wheels into the track.

